

***R&B Wire Products, Inc.***



## **ASSEMBLY INSTRUCTIONS**

### **ELEVATED POLY TRUCK**

Tools required will be a standard screwdriver and a 7/16" wrench.

### **POLY TRUCK**

- 1) Remove base and basket or tub from carton and place the basket or tub on top of the base.
- 2) With the Tub on the base, line up the holes in the tub with the holes in the base.

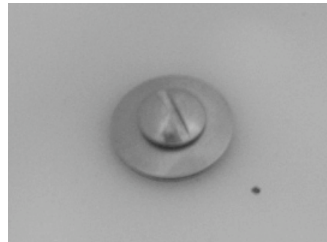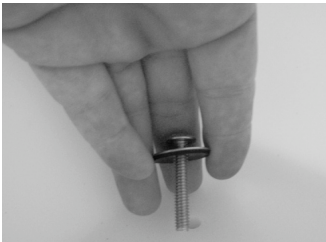

- 3) Take the stainless Steel bolt and the Stainless Steel Washer with the Rubber gasket and insert them through the pre-drilled hole in the tub and through the base until the washer sets flush against the bottom of the tub.



- 4) Take the nut and place onto the bolt. Finger tighten only.



- 5) Repeat these steps until all four nuts, bolts and washers have been installed. Tighten all four nuts and bolts until secure. Your Elevated Poly Cart is now ready for use.

#### **WARNING**

- Never allow children (or adults) to ride in or on the cart.
- Always proceed slowly. Be sure wheels roll free and turn easily.
- Place all loads in the center of the basket or tub for balance.
- Maximum capacity: 463 (3 bu) – 40 lbs; 464 (4 bu) – 50 lbs; 466 & 4606 (6 bu) – 60 lbs.



2902 W. Garry, Santa Ana, California 92704  
714/549-3355 • 800/634-0555 Toll Free • Fax 714/549-0625  
E-mail: [sales@rbwire.com](mailto:sales@rbwire.com) [www.rbwire.com](http://www.rbwire.com)



"YOUR RELIABLE PARTNER  
FOR OVER 57 YEARS"