



R&B WIRE PRODUCTS, INC.

MANUFACTURING COMMERCIAL QUALITY PRODUCTS FOR OVER 65 YEARS!

200 CART HANDLE ASSEMBLY INSTRUCTIONS

Step 1: First remove both of the Basket to Base bolts from one end of the laundry cart. If you are ordering the handle with the cart you can install the handle while setting up the laundry cart.



You will need to reuse these bolts to install the handle.

Step 2: Insert the handle through the basket as shown. Turn the handle down so that the ends cover the basket strap holes.



Take the bolts that were removed and insert the bolts through the base hole from the bottom, up through the basket strap and into the threaded insert on the handle.


Tighten both bolts securely.



Step 3: Take one of the 4 short straps provided and place on the inside of the basket between the support stub and the basket wires.



Take a second short strap with one of the provided bolts and 3 of the washers and install from the outside of the basket.

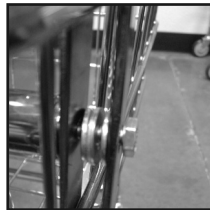

Step 4: Repeat this process on the opposite side. Make sure that the inside and outside short straps are lined up with each other and tighten securely.



Tools needed: Regular screwdriver and 7/16" wrench or socket.



R&B WIRE PRODUCTS, INC.

MANUFACTURING COMMERCIAL QUALITY PRODUCTS FOR OVER 65 YEARS!



YOUR TRUSTED PARTNER
SINCE 1946

2902 W. Garry, Santa Ana, California 92704

714/549-3355 • 800/634-0555 Toll Free • Fax 714/549-0625

E-mail: sales@rbwire.com

www.rbwire.com